ENC400 Operation Manual

RGB to NTSC and S-Video Encoder

Microl mage Video Systems division of World Video Sales Co., Inc.

P.O. Box 331 Boyertown, PA 19512 610-754-6800 Fax 610-754-9766 info@mivs.com

www.mivs.com

Contents

Specifications		Page 2
Unpacking		Page 3
Power	tions	Page 3
In case of difficulty		Page 3
Warranty		Page 4
Returns		Page 4
	Rev 0 01	-28-1999
Specifications		
Input level Output level Connectors Resolution Modulation Genlock Sync Video System H & V Frequency Chroma Frequency Temperature	(RGB) 1.0 Vpp Composite, 75 Ù terminated (S) 5.0 Vpp max 75 Ù terminated (Y & Video) 1 Vpp typical into 75 ohm (C) 0.28 Vpp burst typical into 75 ohm (R, G, B, S, Video) BNC female (S-Video) 4 pin mini DIN F Greater than 400 lines R-Y, B-Y Axes Combination Analog & Digital Synthesis Internal (sync on green) or External (default) NTSC, RS170 15.754 Khz (H), 59.94 Hz (V) 3.579545 Mhz	
Operating Storage Humidity Operating Storage Power Size Size	-40° ~ 60° C (-40° ~ 140° F) 10% ~ 90% (non-condensing) 5% ~ 95% (non-condensing) 110 ~ 125 VAC, 60Hz , 6W max	
Weight	6.3" (w) x 5.1" (D) x 1.9" (H) 160 mm (w) x 130 mm (D) x 48 mm (H) 12 oz. A by Microlmage Video Systems	

Unpacking

The ENC400 package includes the following items:

ENC400 12V wall plug transformer This operation manual

Please inspect all items carefully and report damaged or missing items to your dealer or MicroImage Video Systems.

Connections

Power

The ENC400 uses a 12 VDC wall plug transformer which is included with the unit. Connect to a source of 120VAC, 60Hz.

Video Connections

Connect the video source (i.e. camera) to the RGBS IN connectors on the VDA unit. Connect the OUTPUT signals (Video or S-Video) from the ENC400 unit to the video displays as required.

The ENC400 is set from the factory to work with external sync. An internal jumper can be changed to select internal (sync on green).

The RGB signal source **must** meet NTSC RS-170(A) specifications (H & V frequency) for this product to work properly.

In case of difficulty

If you are experiencing problems with your MicroImage product, you can contact us in one of the following ways.

Mail MicroImage Video Systems

a division of World Video Sales Company, Inc.

P.O. Box 331 # Boyertown, PA 19512

 Phone
 610-754-6800

 Fax
 610-754-9766

 Email
 support@mivs.com

 Web
 www.mivs.com

Warranty

MicroImage Video Systems warrants that each ENC400 is free from defects due to faulty materials or improper workmanship for a period of one (1) year. MicroImage Video Systems further warrants that any part which proves defective in materials or workmanship within one (1) year, will be replaced or repaired at no cost to the user. Labor to replace defective parts will be done without charge, provided the equipment is returned to MicroImage Video Systems prepaid, insured and properly packaged. Prior return authorization must be obtained from MicroImage Video Systems.

NOTE

This warranty covers the MicroImage ENC400 only.

CONDITIONS

This warranty is void if the warranted part has been altered or subjected to abuse or misuse. Defective parts must be returned to MicroImage Video Systems.

SOLE WARRANTY

This Warranty is in lieu of all other warranties expressed or implied including, without limitation, any implied warranty or any implied warranty of fitness for a particular purpose. MicroImage Video Systems shall have the final right to determination as to the existence and cause of any defect and its appropriate adjustment in accordance with the terms of this warranty. In no event shall MicroImage Video Systems be liable for any consequential or collateral damages.

Returns

All returns MUST have an RMA number. Please call, fax or email for an RMA form. The RMA form will have the proper shipping address for returns.

Phone 610-754-6800 Fax 610-754-9766 Email service@mivs.com